

417.023 HOT CHOCOLATE DISPENSER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	ZBC250-1021	Body A	1
2	ZBC250-1022	Body B	1
3	ZBC250-1023	Lid A	1
4	ZBC250-1024	Lid B	1
5	ZBC250-1025	Base A	1
6	ZBC250-1026	Base B	1
7	ZBC250-1027	Tray	1
8	ZBC250-1028	Heating Plate Holder	1
9	ZBC250-1029	Blender	1
10	ZBC250-10210	Heating Plate	1
11	ZBC250-10211	Pipe	1
12	ZBC250-10212	Bowl	1
13	ZBC250-10213	Shaft Pipe	1
14	ZBC250-10214	Screw	1
15	ZBC250-10215	Manual Book	1
16	ZBC250-10216	Cup	1
17a	ZBC250-10217A	O Ring Set For 30 Plunger	1
17b	ZBC250-10217B	O Ring For 10 Heating Plate	1
17c	ZBC250-10217C	O Ring For Sealing	1
17d	ZBC250-10217D	O Ring For Pipe	1
18	ZBC250-10218	Electria Plug	1
19	ZBC250-10219	Safety Fuse	1
20	ZBC250-10220	Heating Plate Element	1
21	ZBC250-10221	Heating Plate Part	1
22	ZBC250-10222	Motor	1
23	ZBC250-10223	Motor Holder	1

417.023 **HOT CHOCOLATE DISPENSER** - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
24	ZBC250-10224	0-120 Thermostat With Knob	1
25	ZBC250-10225	Shaft	1
26	ZBC250-10226	0-90 Thermostat With Knob	1
27	ZBC250-10227	Foot	1
27-1	ZBC250-10227-1	Foot	4
28	ZBC250-10228	Handle	1
29	ZBC250-10229	Spring	1
30	ZBC250-10230	Plunger	1
31	ZBC250-10231	Pin	1
32	ZBC250-10232	Switch	1
33	ZBC250-10233	Ac Plug Holder	1
34	ZBC250-10234	Lid Ball	1
35	ZBC250-10235	Ac Plug	1
36	ZBC250-10236	Screw	1