

## 688.087 RICE COOKER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	ZCE100-1001	Cover opening button	1
2	ZCE100-1002	Key seat	1
3	ZCE100-1003	Key pin	1
4	ZCE100-1004	Handle cover	1
5	ZCE100-1005	Steam hole sealing ring	2
6	ZCE100-1006	Screw	2
7	ZCE100-1007	Steam valve bracket	1
8	ZCE100-1008	Button spring	1
9	ZCE100-1009	Screw	1
10	ZCE100-10010	Handle seat	1
11	ZCE100-10011	Steel cover SUS409	1
12	ZCE100-10012	Screw	10
13	ZCE100-10013	Screw	4
14	ZCE100-10014	Screw	3
15	ZCE100-10015	Screw	1
16	ZCE100-10016	Back cover	1
17	ZCE100-10017	Hinge shaft	1
18	ZCE100-10018	Rear pressing plate	1
19	ZCE100-10019	Right spring	1
20	ZCE100-10020	Water collecting box frame	1
21	ZCE100-10021	Screw	1
22	ZCE100-10022	Collecting cup	1
23	ZCE100-10023	Screw	2
24	ZCE100-10024	Left spring	1
25	ZCE100-10025	Screw sealing	4
26	ZCE100-10026	Aluminum cover	1
27	ZCE100-10027	Supporting rod	2
28	ZCE100-10028	Sealing ring	1
29	ZCE100-10029	Silica gel cup	1
30	ZCE100-10030	Aluminum cover shaft	1
31	ZCE100-10031	Plastic cover ring bracket	4
32	ZCE100-10032	Screw	1
33	ZCE100-10033	Silica gel gasket	1

## 688.087 RICE COOKER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
34	ZCE100-10034	Micro pressure aluminum cover	1
35	ZCE100-10035	Inner pot	1
36	ZCE100-10036	Front lock plate	1
37	ZCE100-10037	Screw	4
38	ZCE100-10038	Inner pot handle frame	2
39	ZCE100-10039	Inner pot handle	2
40	ZCE100-10040	Plastic ring	1
41	ZCE100-10041	Sensor	1
42	ZCE100-10042	Heating plate 220V 2500W	1
43	ZCE100-10043	Screw	6
44	ZCE100-10044	Middle level	1
45	ZCE100-10045	Housing fixing plate	2
46	ZCE100-10046	Shell SUS409	1
47	ZCE100-10047	PCB (display board)	1
48	ZCE100-10048	Plastic control shell	1
49	ZCE100-10049	Screw	2
50	ZCE100-10050	Trademarks paste	1
51	ZCE100-10051	Screw	4
52	ZCE100-10052	Screw	4
53	ZCE100-10053	Power cord 1.5M 3*1.5MM2	1
54	ZCE100-10054	Screw	2
55	ZCE100-10055	Wire clip cover	1
56	ZCE100-10056	Pressing line base	1
57	ZCE100-10057	Screw	1
58	ZCE100-10058	Screw	1
59	ZCE100-10059	Ceramic individual wiring seat	1
60	ZCE100-10060	Screw	1
61	ZCE100-10061	Ceramic multi line wiring seat	1
62	ZCE100-10062	Screw	3
63	ZCE100-10063	Bottom ring (black)	1
64	ZCE100-10064	PCB board fixing box	1
65	ZCE100-10065	Screw	2
66	ZCE100-10066	PCB board (control panel)	1

## 688.087 RICE COOKER - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
67	ZCE100-10067	Screw	2
68	ZCE100-10068	Display panel mica sheet	1
69	ZCE100-10069	Aluminum foil 135*80MM	1
70	ZCE100-10070	Screw	1
71	ZCE100-10071	The sudden jump temperature controller 15A 200	1
72	ZCE100-10072	Wire insulation casing	1
73	ZCE100-10073	Upper cover heating tube 30W	1
74	ZCE100-10074	Middle heating tube 30W	1
75	ZCE100-10075	Middle heating tube 60W	1
76	ZCE100-10076	Measuring cup	1
77	ZCE100-10077	Rice spoon	1
78	ZCE100-10078	Pan foot bracket	5
79	ZCE100-10079	Electric rice cooker feet	5
80	ZCE100-10080	Screw	5
81	ZCE100-10081	Screw	3
82	ZCE100-10082	Fuse assembly	1
83	ZCE100-10083		1
84	ZCE100-10084		1
85	ZCE100-10085	Screw	1
86	ZCE100-10086	Seat cover (black)	1
87	ZCE100-10087	Screw	4
88	ZCE100-10088	Screw	2
89	ZCE100-10089	Control plate mica sheet	1
90	ZCE100-10090	Screw	5
91	ZCE100-10091	Upper cover thermistor module	1
92	ZCE100-10092	Screw	1
93	ZCE100-10093	Screw	2
94	ZCE100-10094	Screw	1
95	ZCE100-10095	Screw	2
96	ZCE100-10096	Screw	2
97	ZCE100-10097	Screw	1